

HEXA Playpen



Assembly Instructions

WARNING: Do not leave anything in the playpen which could provide a foothold or create a danger of suffocation or strangulation.

WARNING: All assembly fittings should always be tightened properly.

WARNING: Do not use the playpen if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

WARNING: Accessories which are not approved by the manufacturer should not be used.

WARNING: If a child can become entangled within the playpen, there is a risk of strangulation.

WARNING: If a child can get a length or loop of cord, etc. wrapped around its neck, its airways could become restricted and brain damage could result.

WARNING: Never use plastic shipping bags or other plastic film as mattress covers not sold and intended for that purpose. They can cause suffocation.

STRANGULATION HAZARD:

1. Strings and cords can cause strangulation! Keep strings and cords away from child.
2. NEVER place product near a window where cords from blinds or drapes can strangle a child. devices.
3. NEVER hang strings on or over the playpen.
4. NEVER place items with a string around a child's neck, such as hood strings, pacifier cords, etc.
5. NEVER attach strings to toys.
6. To avoid danger or suffocation keep this buggy bag away from babies and children.

PLAYPEN SET-UP:

1. Keep fingers clear of folding mechanism during folding and unfolding.
2. Keep all children away from the playard during assembly. (sides not fully expanded).
3. Always set up playard on a flat, level surface. Check floor/ground surface underneath playard floor to assure that it is clear of any objects that may injure your child. Insure surface is suitable for your child to play on.

TO FOLD PLAYPEN:

- 1: Unbuckle all latches..

2: pull down the locking devices along the pipe tube, until the playpen is completely closed.

WARNING! To avoid danger of suffocation remove plastic cover before using this playpen. The cover should be destroyed or kept away from children.

1. Do not place the playpen next to an open fire or other heat source.
2. Do not use the playpen without the base.

3. Ensure the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.

WARNING! Failure to follow these warnings and the instructions could result in serious injury or death. Please read instruction manual before set-up. If you misplace your instruction manual. DO NOT use this product. Contact dealer for a replacement instruction manual.

1. Only applies to children under the age of 3.
2. If the child can climb out or is of a height more than 35 inches (890mm) or the weight more than 15KG, please stop using this product.
3. Child can become entrapped and die when improvised netting or covers are placed on top of product. Never add such items to confine child in playpen.
4. When child is able to pull to a standing position, remove any objects, such as large toys, in playpen that could serve as steps for climbing out.
5. Always provide the supervision necessary for the continued safety of your child. When used for playing, never leave child unattended.
6. To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
7. Never use this product if there are any loose or missing fasteners, loose joints, broken parts or torn mesh/fabric. Check product before assembly and periodically during use. Contact dealers for replacement parts. Never substitute parts.

8. Do not use water filled mattress. Do not use mats.

WARNING! Suffocation hazard: Infant can suffocate.

1. In gaps between an extra pad and side of playpen
2. In gaps between a mattress too small or thick andf playpen sides
3. On soft bedding. Never add a mattress, pillow, comforter or padding.

IMPORTANT: RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

Tutti Frutti Direct Ltd. Unit 3, 1000 North Circular Road, London, UK, NW2 7JP

t: +44 (0) 208 368 5800

e: customerservice@tuttibambini.co.uk

www.tuttibambini.com

Hello,

Congratulations on your new arrival!
We're so pleased that you have chosen our
Hexa® playpen for your baby.

Please take a few moments to read this guide on how to
use the Hexa® playpen correctly so you can rest assured
that your little one is safe and secure.

Wishing you the best of luck on your new journey,

Team Tutti

Features:

Easy installation / simple operation
Light and compact, very portable
Polygon design, high security
Side door design to facilitate getting the baby out

Introduction

The uses of this product

The playpen is hexagonal, with a height of 750mm.
After expansion, the effective use is an area about 1.4 square meters.

Product features

1. Easy installation, simple operation
2. Light and compact, easy to carry
3. Polygon design, high security
4. Side door design to facilitate getting your child out

Product specifications

The playpen is a hexagonal structure, with a height of 750mm. After the expansion, the effective use of an area of about 1.4 square meters.

The scope of application and maintenance

1. Only applies to children under the age of 3.
2. If the child can climb out or has a height of more than 35 inches/890mm or weighs more than 15KG, please stop using this playpen.
3. Fabric cover is only for hand wash and air-dry. (Machine wash is not allowed).
4. From time to time, check the product's fastener.
5. If the product is not in use for a long period of time, please put in the shade and in a dry place where your child cannot access it.
6. The product's frame can be spot cleaned with a sponge and soapy water.

Service assurance

Thank you for purchasing one of our mother and child safety protection products.
If you are not satisfied with the product or have any questions, please contact the distributor or call our service hotline: +44 (0) 208 368 5800. We will always listen to your valuable advice, sincerely provide you our satisfactory services.




Contents

Product introduction	6
Removing fabric and washing instructions	9
Fabric installation instructions	10




Product Introduction

1. Take out from the packaging

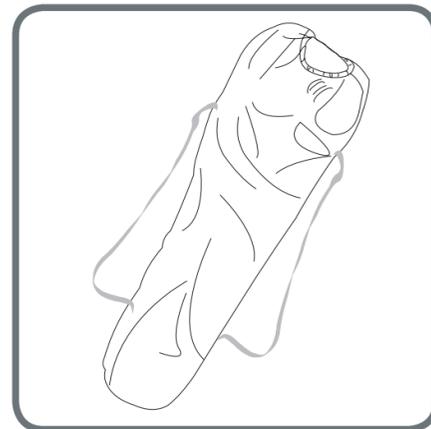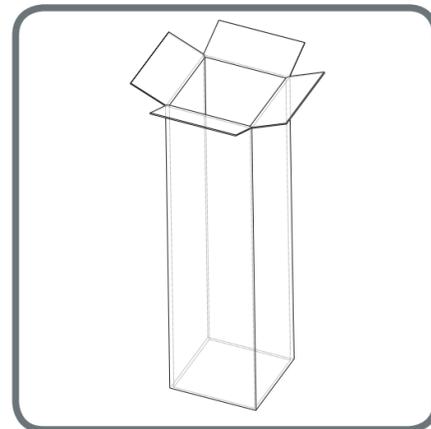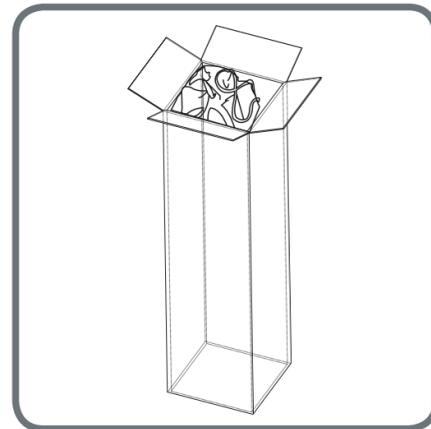


Product Introduction

2. Open the elastic band and take the playpen out

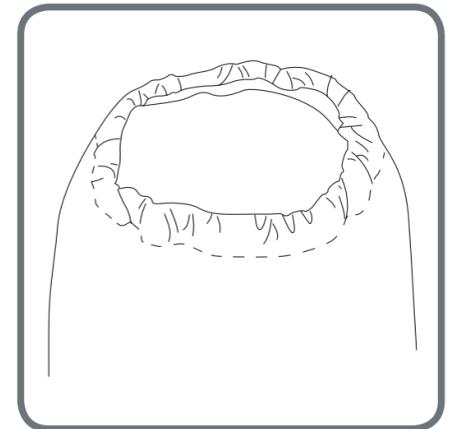

3. Removing the playpen

Remove the yard from the carry bag, as shown in figure, holding any of the plastic joints and lift the plastic joint upward along the leg tube to make it fully expanded.

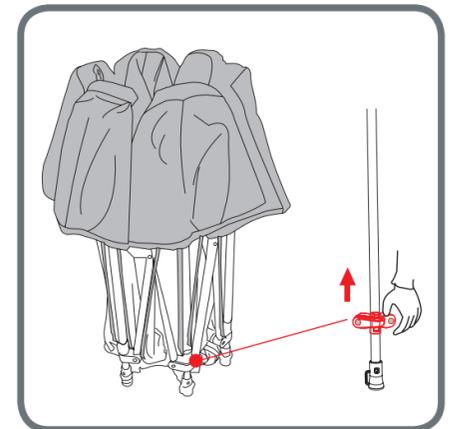

www.tuttibambini.com




www.tuttibambini.com


Product Introduction

4. Lift the locking devices

As shown in image, lift the two red locking devices in the diagonal upward along the tube, when you hear 'pa', it has been locked.

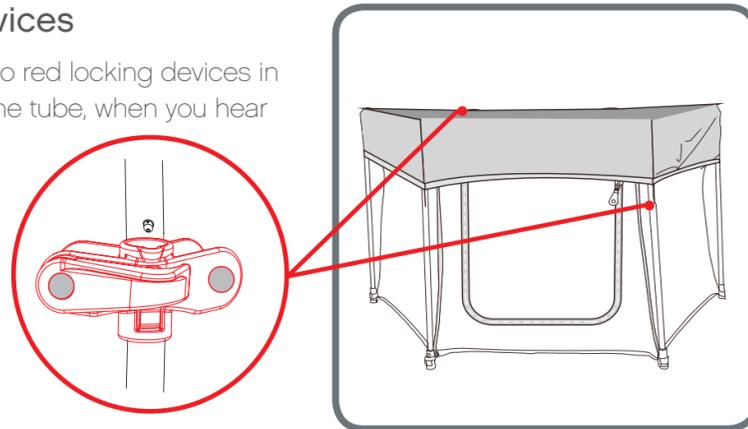


5. Zipper design, easy access

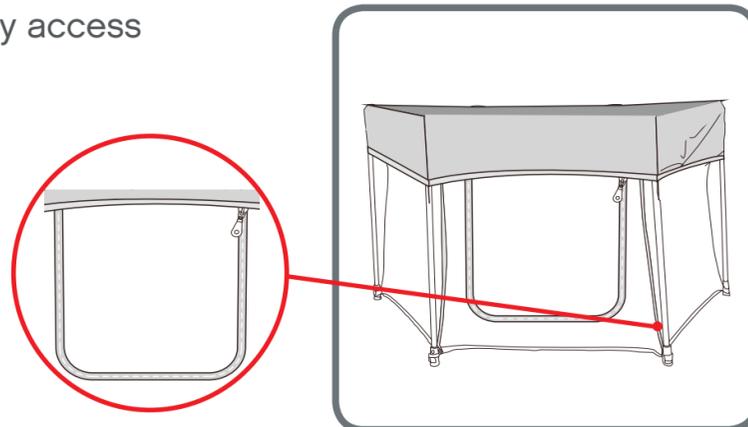

6. Folding the playpen


If you want to fold the playpen, press the two red buttons on the locking devices in the diagonal respectively and pull down the locking devices along the pipe tube, until the playpen is completely closed. (You can directly fold it, also be placed after putting into the carry bag).

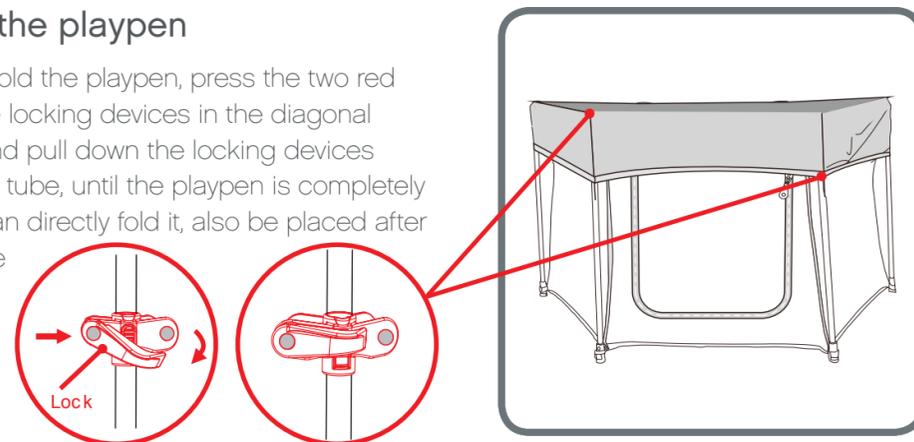

Remove Fabric and Washing


1. Unlock the snap buttons

Unlock the snap buttons respectively of the playpen with the position as shown in image

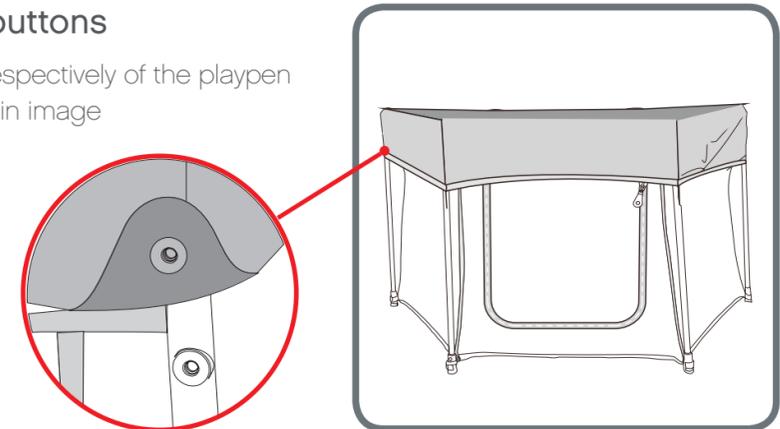

2. Open the snap buttons


Open the snap buttons respectively of the playpen as shown in the picture.

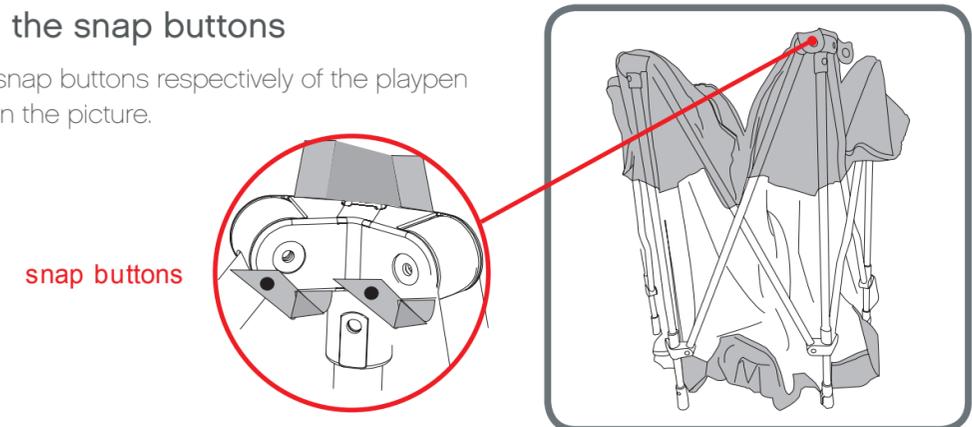

3. Remove the adhesive tape


Remove the adhesive tape at the bottom of the playpen respectively.

Fabric cover is only for hand wash and air dry (machine wash is not allowed).

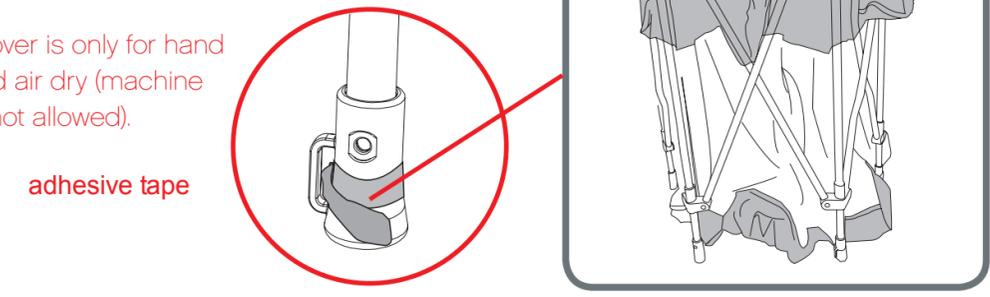

Fabric Installation Instructions



1. Half expand the play yard bracket

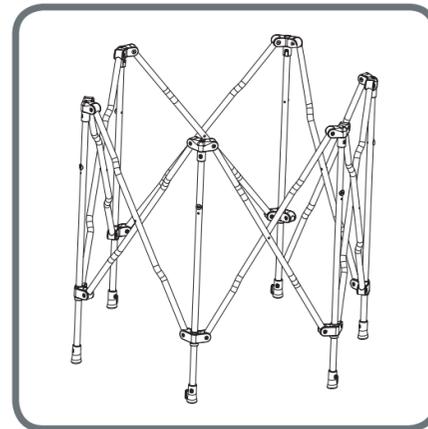

2. Tighten the snap buttons

Tighten the snap buttons respectively of the playpen with the position as shown in the image.



snap buttons

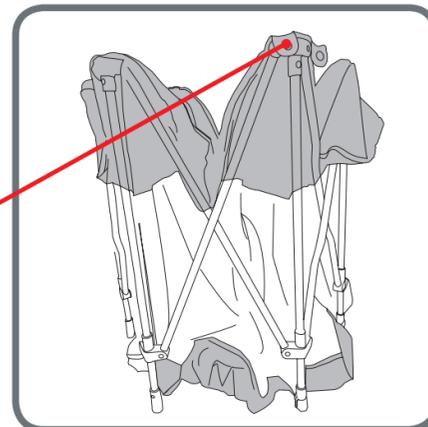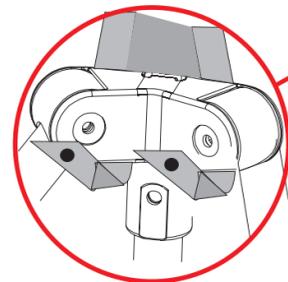

3. Fixing the adhesive tape

Fix the adhesive tape at the bottom of the playpen respectively.



adhesive tape

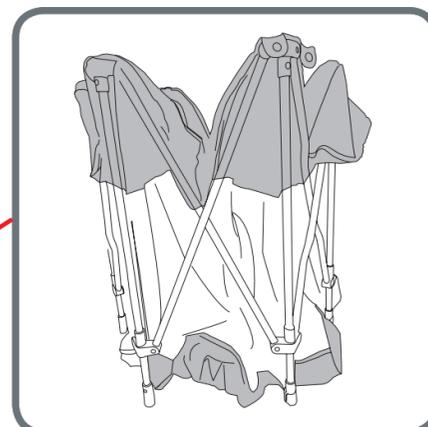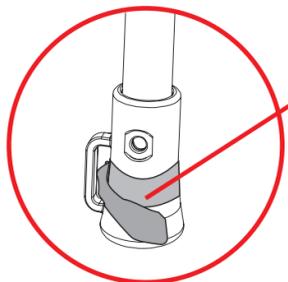

Fabric Installation Instructions

4. Lifting the two red locking devices



As shown in the image, lift the two red locking devices in the diagonal upward along the leg tube, when you hear 'pa', it has been locked.

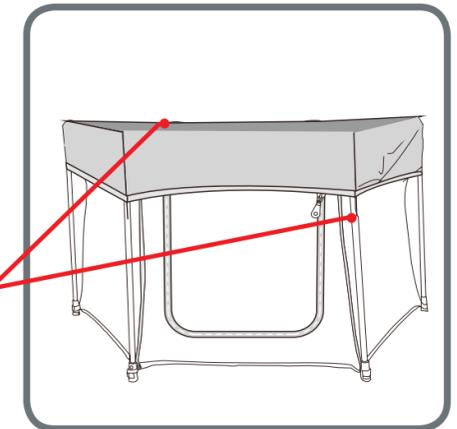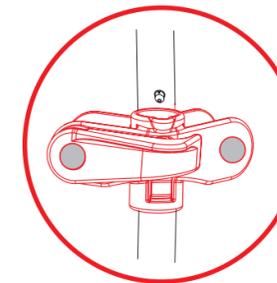

5. Tightening the snap buttons



Tightening the snap buttons respectively on each side of the playpen as shown in the image.

snap buttons

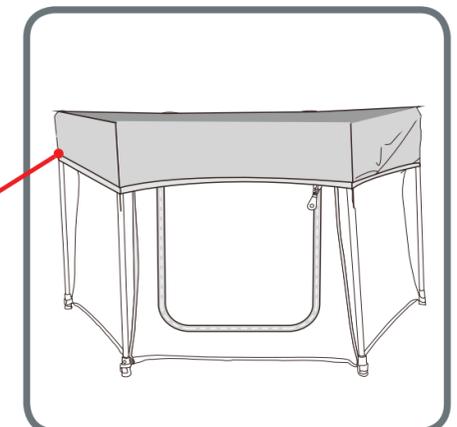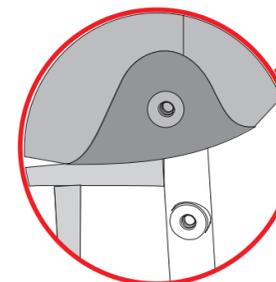

List of products

- A. Bracket Main Part 1st set (Bracket and mesh cover)
- B. Buggy bag 1pc
- C. Instruction booklet 1pc

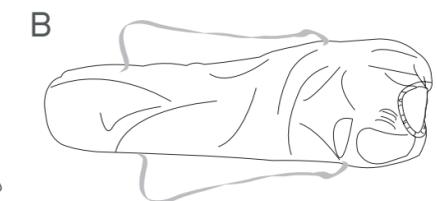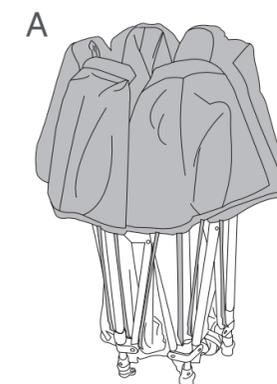



Join Us



Follow us on Facebook
TuttiBambiniUK



Follow us on Twitter
TuttiBambiniUK



Follow us on Instagram
TuttiBambiniUK

www.tuttibambini.com